


Pedra Modular Counter Top System

Vanity Top Assembly Drawing - 48" base cabinet

Material requirement: 2 End sets

Surface coverage: 8.7 sq.ft

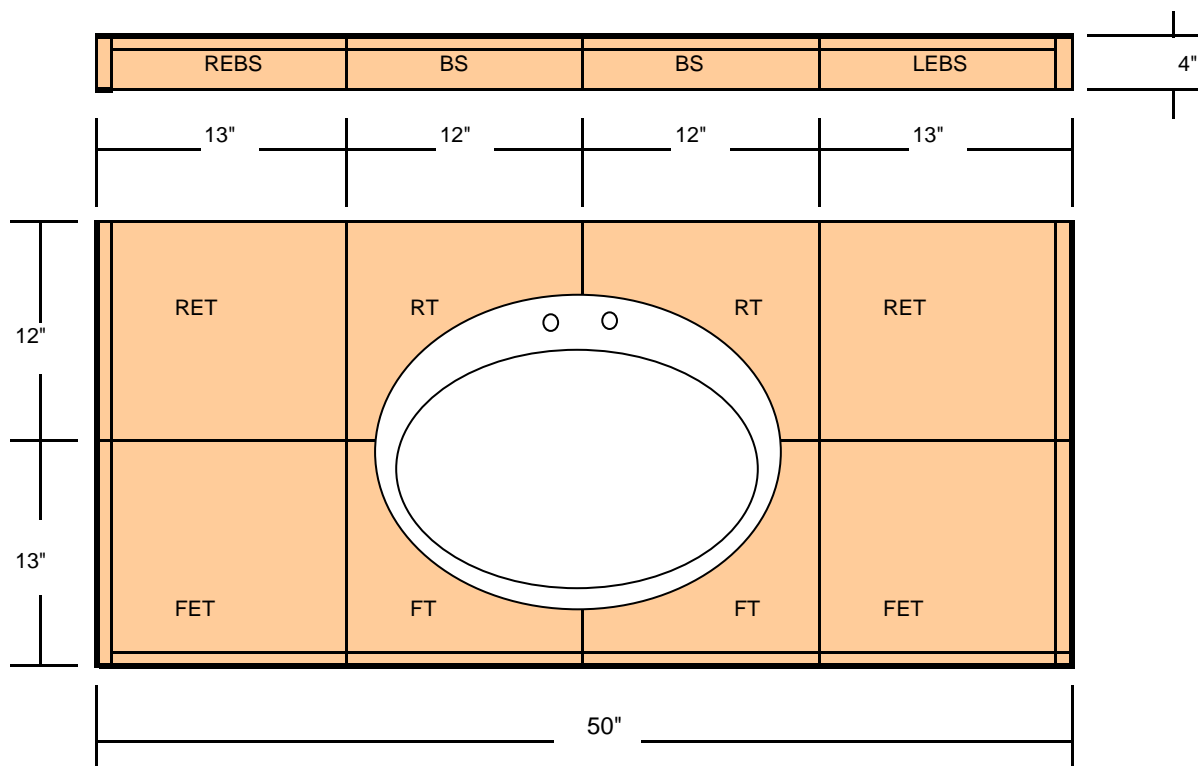

Installing a drop-in type bowl:

- 1- Install a 3/4" plywood on the cabinet flush on the back, 1/8" short on the ends and 3" over hanging in front
- 2- Use shims to level the top (use spirit level) and screw the board to the frame.
- 3- Do a dry run by laying the modular pieces on the top & mark the cut out area using manufacturer's template
- 4- Remove the modular pieces and cut them individually as marked
- 5- Place them back on the top and mark the plywood for cut out and cut as marked
- 6- Install the modular pieces on the top by using the thinset or mastic, level pieces and allow for cure as recommended.
- 7- Install the bowl following instructions from manufacturer
- 8- Depth of the top can be adjusted by cutting RT and RET to required size prior to dry run/installation.

Abbreviations:

- FT - Front Tile
- RT - Rear Tile
- LEBS - Left End Back Splash
- BS - Back Splash
- LCBS - Left Corner Back Splash
- RCBS - Right ECorner Back Splash
- REBS - Right End Back Splash

Notes:

- 1- The inner thin line shows the edge finish sides on the tiles
- 2- Counter top Tile & back splash thickness is 1/2"
- 3- The edge finish on the counter top tiles will be 1-1/4" laminated half bull nose
- 4- Edge finish on the back splash will be eased
- 5- Edge finish on back splash will be "Eased" (square edge with 4x4 mm bevell)
- 6- Inner edges of the tiles & back splash shall be bevelled for grout line.

Product	Modular Counter Top System		
Title	L - Corner Assembly Details		