


**Pedra Modular Counter Top System**

**Vanity Top Assembly Drawing - 48" base cabinet**

**Material requirement:** 2 End sets

**Surface coverage:** 8.7 sq.ft

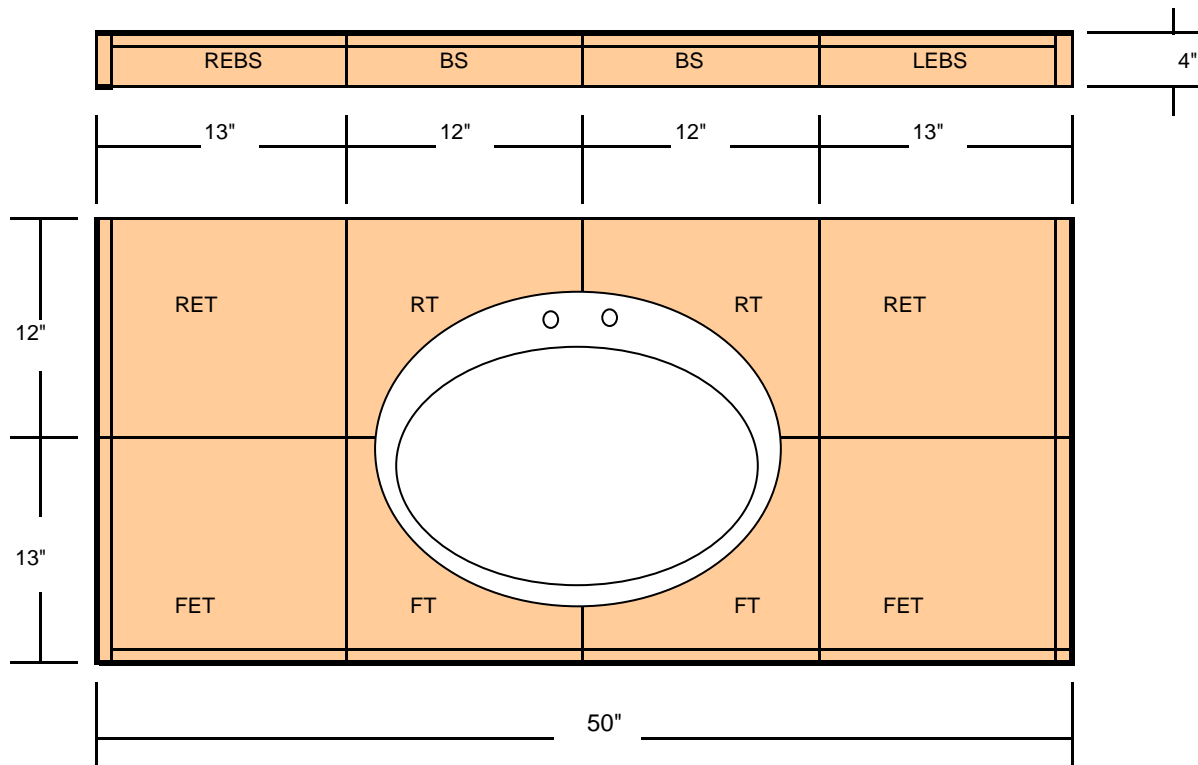

**Installing a drop-in type bowl:**

- 1- Install a 3/4" plywood on the cabinet flush on the back, 1/8" short on the ends and 3" over hanging in front
- 2- Use shims to level the top (use spirit level) and screw the board to the frame.
- 3- Do a dry run by laying the modular pieces on the top & mark the cut out area using manufacturer's template
4. Remove the modular pieces and cut them individually as marked
5. Place them back on the top and mark the plywood for cut out and cut as marked
6. Install the modular pieces on the top by using the thinset or mastic, level pieces and allow for cure as recommended.
- 7- Install the bowl following instructions from manufacturer
8. Depth of the top can be adjusted by cutting RT and RET to required size prior to dry run/installation.

**Abbreviations:**

- FT - Front Tile
- RT - Rear Tile
- LEBS - Left End Back Splash
- BS - Back Splash
- LCBS - Left Corner Back Splash
- RCBS - Right ECorner Back Splah
- REBS - Right End Back Splash

**Notes:**

- 1- The inner thin line shows the edge finish sides on the tiles
- 2- Counter top Tile & back splash thickness is 1/2"
- 3- The edge finish on the counter top tiles will be 1-1/4" laminated half bull nose
- 4- Edge finish on the back splash will be eased
- 5- Edge finish on back splash will be "Eased" (square edge with 4x4 mm bevell)
- 6- Inner edges of the tiles & back splash shall be bevelled for grout line.

<b>Product</b>	Modular Counter Top System		
<b>Title</b>	L - Corner Assembly Details		