
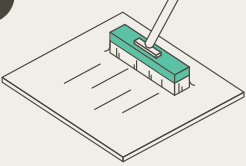
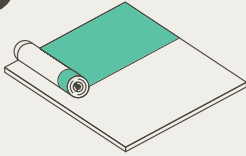
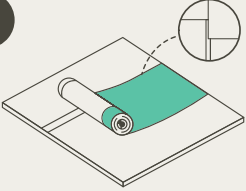
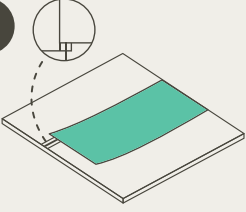


<p>1</p> 	<ol style="list-style-type: none"> 1. Make sure the subfloor is structurally sound, level and is free of dust and debris. 2. Check for protruding nails and/or defects in the subfloor. If installing over concrete, the concrete must meet the floor covering manufacturer's acceptable moisture tolerance range.
<p>2</p> 	<ol style="list-style-type: none"> 1. Start in a corner with the tape strip side next to the wall and the overlapping film towards the open room. 2. Install floorMuffler® ultraSeal (overlap film side down) parallel to the wall in the opposite direction that you plan to install the flooring planks. 3. When installing the floorMuffler® ultraSeal, leave at least 2" going up the wall (you will trim this part after installing the floor).
<p>3</p> 	<ol style="list-style-type: none"> 1. Be sure to unfold the overlap plastic film, extending it 3" from the foam. 2. Roll out the next roll of floorMuffler® ultraSeal in the same manner, making sure that the foam seams are butted together. 3. Be sure to overlap only the moisture barrier plastic film and not the underlayment pad.
<p>4</p> 	<ol style="list-style-type: none"> 1. Remove the adhesive liner and adhere the underlayment to the plastic film overlap.
<p>5</p> 	<ol style="list-style-type: none"> 1. Install the flooring per manufacturer's instructions.

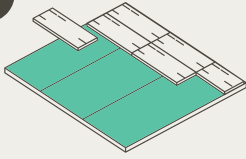